



PRELIMINARY

INSTALLATION AND SERVICE MANUAL

12996A

LINE PRINTER SUBSYSTEM

Manual Part No. 12996-90003
Microfiche Part No. 12996-90005

Printed AUG 1976

LIST OF EFFECTIVE PAGES

Changed pages are identified by a change number adjacent to the page number. Changed information is indicated by vertical line in the margin of the page. Original pages (Change 0) do not include a change number. Insert latest changed pages and destroy superseded pages.

Change 0 (original) AUG 1976

All pages in this edition are original

NOTICE

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied or reproduced without the prior written consent of Hewlett-Packard Company.

CONTENTS

| | | | |
|-----------------------------------|------|------------------------------------|------|
| Section I | Page | Section III | Page |
| GENERAL INFORMATION | | OPERATION | |
| Introduction | 1-1 | Turn-On Procedure | 3-1 |
| General Description | 1-1 | Paper Loading Procedure | 3-1 |
| Equipment Furnished | 1-1 | Operation | 3-1 |
| Specifications | 1-1 | Paper Status Flag | 3-1 |
| | | ASCII Character Exception | 3-1 |
| | | Software Modes | 3-1 |
| Section II | Page | Section IV | Page |
| INSTALLATION | | PROGRAMMING | |
| Introduction | 2-1 | Introduction | 4-1 |
| Unpacking and Inspection | 2-1 | Control Functions | 4-1 |
| Installation | 2-1 | Data Word | 4-1 |
| HP 12566B Jumpers | 2-1 | Status Bit | 4-1 |
| HP 9866A Power Requirements | 2-1 | | |
| Interface PCA | 2-1 | Section V | Page |
| Verifying Operation | 2-2 | SERVICE | |
| Repacking for Shipment | 2-3 | Introduction | 5-1 |
| Original Packaging | 2-3 | Cleaning Printer | 5-1 |
| New Packaging | 2-3 | Line Printer Troubleshooting | 5-1 |

ILLUSTRATIONS

| | | | |
|--|------|-----------------------------|------|
| Title | Page | Title | Page |
| Wiring Data for Interface Cable Assembly | 2-4 | Data Transfer Program | 4-1 |

TABLES

| | | | |
|----------------------------------|------|--|------|
| Title | Page | Title | Page |
| Interface Jumper Positions | 2-1 | Printer Character Binary and Octal Codes | A-1 |

GENERAL INFORMATION

SECTION

I

1-1. INTRODUCTION

1-2. This manual covers the HP 12996A Line Printer Subsystem and its components. The five sections of the manual contain general information, installation, operation of the printer in the subsystem, programming the subsystem, and maintenance. Separate manuals included with the subsystem provide details of the line printer and computer interface. The remainder of this section provides a general description, a list of equipment furnished, and subsystem specifications.

1-3. GENERAL DESCRIPTION

1-4. The HP 12996A Line Printer Subsystem consists of all the equipment and software required to provide line printing capability for HP 2100-Series Computer Systems. Subsystem components consist of a printer, an interface PCA, an interface cable, and diagnostic software. Drivers are available for DOS, RTE, BCS, and SIO.

1-5. The printer utilizes heat sensitive paper and a fast, non-impact thermal printing method. The print rate is 240 lines-per-minute with 80 columns and a 64-character set of symbols. Two switches on the printer rear panel select the required mains voltage at a frequency of 48 to 60 Hz. Additional details of line printer and interface performance and capabilities are provided in the printer operating and service manuals supplied with the subsystem.

1-6. EQUIPMENT FURNISHED

1-7. The following equipment, software, and manuals are supplied with the HP 12996A Line Printer Subsystem:

- a. HP 9866A Line Printer.
- b. HP 12566B-004 Line Printer Interface Kit.
- c. Diagnostic Paper Tape, part no. 12996-16001.
- d. *HP 9866A Printer Peripheral Manual*, part no. 09866-90000.

- e. *HP 9866A Printer Service Manual*, part no. 09866-90030.
- f. *HP 12566B Microcircuit Interface Kit Operating and Service Manual*, part no. 12566-90015.
- g. *HP 12566B-004 Line Printer Interface Kit Operating and Service Manual*, part no. 12566-90019.
- h. *HP 9866A/12566B Line Printer and Interface Diagnostic Reference Manual*, part no. 12996-90001.
- i. *HP 12996A Line Printer Subsystem Installation and Service Manual*, part no. 12996-90003.

1-8. The line printer is supplied with a power cord, part no. 8120-1378, for operation in the U.S.A. on 120 Vac power. For 220 Vac and 240 Vac operation, part no. 8120-0698 power cord should be used. Power cords or adapters for other countries must be furnished by the user.

1-9. Also supplied with the line printer are spare fuses, a dust cover (part no. 4040-0504), and two rolls of printer paper (part no. 9281-0414).

1-10. The HP 12566B Line Printer Interface Kit with Option 004 includes the following items:

- a. Microcircuit Interface Card, part no. 12566-60024.
- b. Cable Assembly, part no. 12566-60028 (20 ft., 6.1m in length) or part no. 12566-60030 (23 ft., 7.0m in length).
- c. Operating and service manuals as specified above in the subsystem list.

1-11. SPECIFICATIONS

1-12. Operating and environmental specifications for the line printer are found in the *Hewlett-Packard 9866A Printer Peripheral Manual*, part no. 09866-90000. Electrical specifications for the microcircuit interface card (hereafter called the interface PCA) are covered in the *HP 12566B Microcircuit Interface Kit Operating and Service Manual*, part no. 12566-90015. Current requirements for the interface PCA are 1.1A at +5.0 Vdc and 0.05A at -2 Vdc.

INSTALLATION

SECTION

II

2-1. INTRODUCTION

2-2. This section provides the required information to incorporate the HP 12996A Line Printer Subsystem into a system containing an HP 2100 Series Computer. Included in this information are the following subjects: unpacking and inspection, cable installation, jumper configuration, line printer installation requirements, interface PCA installation and cabling instructions, and recommended re-packing and shipping methods.

2-3. UNPACKING AND INSPECTION

2-4. If the shipping container is damaged upon receipt, request that the carrier's agent be present when the item is unpacked. Inspect it for damage (scratches, cracks, loose components, etc.). If the visual inspection reveals any damage or it fails to meet specifications, notify the nearest Hewlett-Packard Sales and Service Office. Hewlett-Packard will arrange for replacement or repair without waiting for settlement of claims against the carrier. In the event of damage in transit, retain the packing container for inspection.

2-5. INSTALLATION

2-6. Installation of the HP 12996A Line Printer Subsystem consists of the following: Verifying the positioning of the jumpers on microcircuit interface card, installing card and interface cable, checking power requirements and installing power cord, installing roll of paper in line printer, and running the line printer diagnostic as a verification of operation.

2-7. HP 12566B JUMPERS

2-8. Jumpers on the HP 12566B Microcircuit Interface Card should be positioned according to table 2-1. Location of the jumpers can be found in the operating and service manual for the interface card.

2-9. HP 9866A POWER REQUIREMENTS

2-10. The HP 9866A Line Printer operates from nominal mains voltages of 100, 120, 220, and 240 Vac over a range of + 5% to - 10%. The voltage should be selected at installation, using the two switches on the rear panel. The mains frequency must be within 48 to 66 Hz.

Table 2-1. Interface Jumper Positions

| JUMPER | POSITION | FUNCTION |
|--------|-----------|--|
| W1 | A | Positive True Command to Printer |
| W2 | B | Clears Command FF on negative-going Flag from Printer |
| W3 | A | Sets Flag Buffer and Strobes Data on positive-going edge of Printer Flag |
| W4 | B | Continuously available output data |
| W5 | Removed | |
| W6-W8 | Installed | |
| W9 | A | Command FF cleared by CLC, CRS, and Printer Flag |

WARNING

Before changing the fuse, be sure that the printer is disconnected from any power source.

2-11. The proper fuse MUST be installed. For 100V to 120V operation, use a 3.0A, 250V, slow-blo fuse. For 220V to 240V operation, use a 1.5A, 250V, slow-blo fuse.

2-12. In operation, the line printer cabinet should be grounded through the power cord to an appropriate power receptacle. The HP 9866A Line Printer is shipped with a NEMA/CEE type power cord to mate with receptacles in the U.S.A. for 110 Vac to 120 Vac mains voltages. For 220 Vac to 240 Vac mains voltages in the U.S.A., obtain the proper power cord, part no. 8120-0698, from Hewlett-Packard. For power mains in other countries, the appropriate power cord must be fabricated or an adapter used to mate the NEMA plug with the local receptacle.

2-13. INTERFACE PCA

2-14. Install the interface PCA in one of the HP 2100 or 21MX computer I/O slots or I/O extender as follows:

- a. Determine the I/O select code to be used and the corresponding I/O slot in the computer or I/O extender. (Note: The line printer's baud rate is approximately 3000.)

- b. For an HP 2100 installation proceed as follows:

- (1) Turn off power at the computer and I/O extender (if used).
- (2) Remove top cover from the computer or I/O extender (if used).
- (3) Install the interface PCA, part no. 12566-60024, in the required I/O slot. (Be sure the component side of the PCA faces in the same direction as on the other PCA's in the I/O section of the computer or I/O extender.) Secure by pushing down on the PCA extractor levers.
- (4) Feed the interface cable, part no. 12566-60028 or 12566-60030, through the cable exit port and press the hooded PCA connector onto the connector of the interface PCA. Connect opposite end of interface cable to rear of line printer on the connector labeled SIGNAL.

- (5) Replace top cover and turn on power.

- c. For an HP 21MX installation, proceed as follows:

- (1) Rotate key-operated switch to the STANDBY position which removes CPU and I/O power. If an I/O extender is used instead of the CPU set extender LINE switch to OFF.

NOTE

Do not set computer LINE switch to OFF, and if the computer is housed in a system cabinet, do not use the system power switch to remove power. Switching off ac power removes power to the memory and its contents will be lost.

- (2) If the computer is equipped with the optional power fail recovery system, set BATTERY switch to OFF and remove battery cable from the BAT. INPUT connector.
- (3) Remove the I/O PCA cage cover from the computer or the I/O extender rear cover or front panel (depending upon I/O slot number to be used).
- (4) Loosen the PCA retainer on the computer or I/O extender and slide the PCA retainer to the right (or remove retainer for I/O extender front access).

- (5) Install the interface PCA, part no. 12566-60024, in the required I/O slot in the computer or I/O extender (if used). (Be sure that the component side of the PCA faces upward.) Secure the PCA in place by pushing inward on the PCA extractor levers.

- (6) Install the interface cable, part no. 12566-60028 or 12566-60030. The hooded connector pushes onto the PCA with the cable going toward the right. Place cable in the cable exit area at the rear of the computer, or I/O extender, feed through and connect the opposite end to the line printer on the connector labeled SIGNAL.

- (7) Reposition or replace the PCA retainer, PCA card cage cover or I/O extender cover (if used), and battery and battery cable.

- (8) Turn on power of I/O extender (if used) and turn key-operated switch of the computer to RESET, then OPERATE.

For reference and for use in case of difficulty, the wiring data for the interface cable assembly is shown in figure 2-1.

2-15. VERIFYING OPERATION

2-16. Operation of the line printer can be verified by loading and running the Line Printer Diagnostic Tape, part no. 12996-16001. To run the diagnostic, it will be necessary to first load the Diagnostic Configurator Tape, part no. 24296-60001, which is used for equipment configuration and as a console device driver. Be sure to install a roll of paper in the line printer before the test is started. Refer to paragraph 3-3 for paper loading instructions. While the program is running the system console will display operator instructions, information messages, and error messages. Specific instructions for verification are given below. For diagnostic program details, refer to the *HP 9866A/12566B Line Printer and Interface Diagnostic Reference Manual*, part no. 12996-90001.

2-17. After both tapes are loaded into the computer with the computer's binary tape loader (refer to the computer operator's manual for instructions) proceed as follows:

- a. Enter 100 (octal) in the P-register which is the program starting location.
- b. Enter the octal select code (S.C.) of the line printer interface into the S-register bits 0-5.
- c. Press PRESET (EXT. and INT.), RUN.
- d. The computer should run and halt with a display of 102074 (octal). If the wrong select code was entered the halt code will be 102073 (octal), so try again.

- e. Clear the S-register.
- f. Press PRESET (EXT. and INT.), RUN.
- g. Unless there is an error halt, a series of seven tests will be performed, including pattern printouts on the line printer. Upon a successful completion, the computer will halt with a display of 102077 (octal).
- h. If an error halt occurs, refer to the error halt list in the *HP 9866A/12566B Line Printer and Interface Diagnostic Manual*.

2-18. Diagnostic test options can be selected when the computer halts displaying 102074 (octal). All tests from 00 to 06 will be run and all messages and error halts will occur if the S-register is CLEAR (all 0's). Test 01 for Status and Buffer Clear, checks the Out-of-Paper status and thus requires operator intervention. At this point the program will halt with a message on the console to "Remove Paper". The program is restarted by pressing RUN. A second message asks the operator to "Load Paper". The paper status check can be skipped so that the program runs to the end without a stop by entering a *one* into S-register bit eight when the program requests that the test options be entered. If a halt after each test is desired, set bit 15 to *one*. The A-register will contain the test number in octal code.

2-19. REPACKAGING FOR SHIPMENT

2-20. The following paragraphs provide instructions for repackaging the line printer and interface PCA for shipment. Included are instructions for using the original packaging or new packaging. If the component is being sent to the factory for servicing, attach a tag specifying the return address, type of service or repair required, model number, and full serial number.

2-21. ORIGINAL PACKAGING

2-22. Package the components to be returned in their original factory packaging material whenever possible. If


the original packaging material is not available, it can be ordered from a local Hewlett-Packard Sales and Service Office. Comply with the following instructions:

- a. Be sure the component is tagged.
- b. Seal the shipping container securely and mark it "FRAGILE" to ensure careful handling.
- c. In any subsequent correspondence with the factory, refer to the component by model number and full serial number.

2-23. NEW PACKAGING

2-24. Use the following instructions when packaging the component with commercially available materials:

- a. Be sure the component is tagged.
- b. Wrap the line printer in heavy paper or sheet plastic and the interface PCA in Air Cap TH-240 Cushioning (or equivalent) manufactured by Sealed Air Corp., Hawthorne, N. J.
- c. Use strong shipping containers, placing the line printer in a double-wall carton constructed of 160-kg (350-lb) test material and the interface PCA in a corrugated carton of 90-kg (200-lb) test material.
- d. Use sufficient shock-absorbing material on all sides of the line printer to provide a firm cushion and to prevent movement inside the container. Use particular care to protect the corners of the line printer.
- e. Seal the shipping container securely and mark it "FRAGILE" to ensure careful handling.
- f. In any subsequent correspondence with the factory, refer to the component by model number and full serial number.

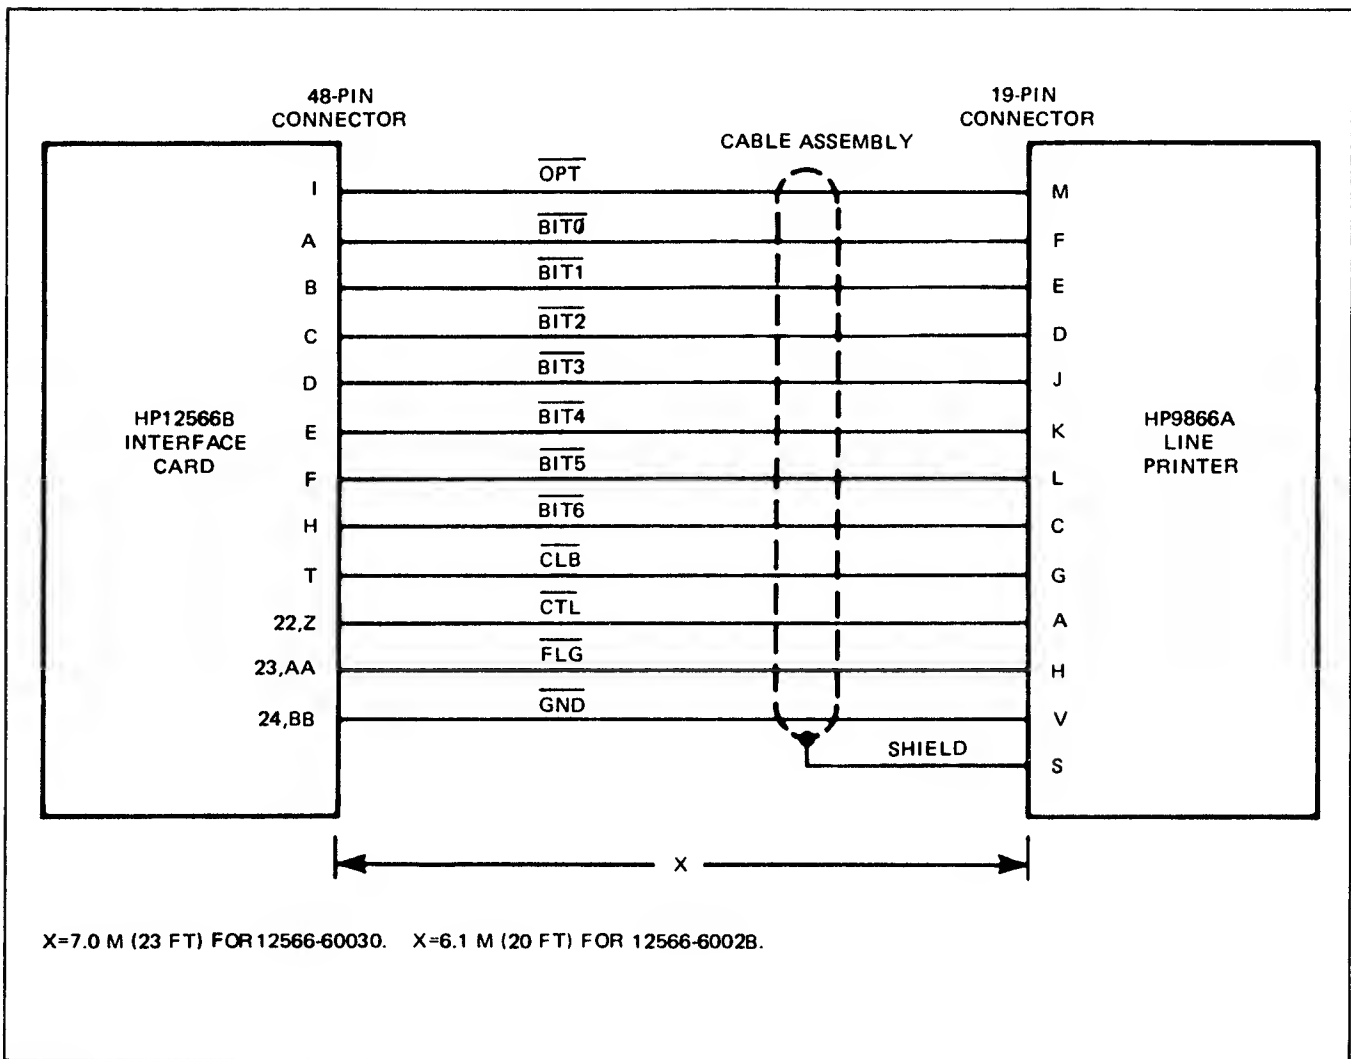

7206-1

Figure 2-1. Wiring Data for Interface Cable Assembly

3-1. TURN-ON PROCEDURE

3-2. Turn-on procedure for the HP 9866A Line Printer is as follows:

- a. Switch on front panel LINE switch. The light above the switch turns on, indicating power is applied.
- b. Amber light below paper button must be ON. If not ON, load paper.
- c. If paper is loaded but does not appear at front of printer, push PAPER button until paper is visible.

3-3. PAPER LOADING PROCEDURE

3-4. Use the following procedure to load paper:

- a. Lift the access cover on top of printer.
- b. Remove paper core of any previous roll. If remaining roll is small, remove old roll by:
 - (1) Unrolling and lifting it upwards until the roll is above the printer.
 - (2) Grasp roll firmly and pull it upward and forward so that the paper guide will tear the paper off cleanly.
- c. If any paper remains in the printer mechanism, remove it by pressing the PAPER button until the paper stops moving.
- d. Remove the first layer of paper from a new roll. Be sure the paper has a cleanly torn or cut edge, as paper with a ragged edge will not load properly.
- e. Insert new roll such that the free end is positioned as shown on the back of the access cover. Press the PAPER button until paper appears at the front of the printer.

3-5. OPERATION

3-6. PAPER STATUS FLAG

3-7. If the paper supply runs out during operation, an Out-of-Paper (OTP) flag command will be returned by the line printer to the interface PCA to set data bit 0.

3-8. ASCII CHARACTER EXCEPTION

3-9. The ASCII character set for the HP 9866A Line Printer is the same as for the HP 2100 Series Computers with one exception. The ← (left arrow) used in the computer has the same octal code as the - (minus) character in the line printer. This will cause some minor complications as follows:

- a. The ← (left arrow) cannot be printed, instead the line printer prints a - (minus) sign.
- b. The Hewlett-Packard I/O drivers for the HP 2767 Line Printer are the same as for the HP 9866A Line Printer except for the SIO driver discussed below. In this driver the ← CR LF combination is used to suppress the CR LF functions so answers to questions or input data can be on the same line as the previous output. Therefore avoid using - (minus), which the driver interpretes as ← (left arrow), in the space immediately before a CR LF. If you do use - CR LF, the (-) character does not print and there will be no carriage return and line feed.

3-10. SOFTWARE MODES

3-11. The subsystem operates in several software modes for which the driver software and manuals are available as options to the subsystem. The driver, which is ordered as an option, will be supplied with the system when the line printer is included in the original configuration. The subsystem will also operate from the diagnostic program using absolute code. The software driver and manual options for the line printer are the following:

- a. System Input/Output (SIO) Drivers (Absolute Binary). Option 12996A-424 includes the following:

8K memory, part no. 24165-60001
12K memory, part no. 24301-60001
16K memory, part no. 24166-60001
24K memory, part no. 29100-60022
Manual, part no. 12653-90004, *SIO HP 2767 Line Printer Driver*.

- b. Basic Control System (BCS) Driver (Relocatable Binary). Option 12996A-423 includes the following:

Driver tape, part no. 24167-16001, D.16; Manual, part no. 12653-90005, *BCS HP 2767 Line Printer Driver Manual*.

- c. Disc Operating System (DOS) Driver (Relocatable Binary). Option 12996A-421 includes the following:

Driver tape, part no. 24168-60001, DVR 12; Manual, part no. 02767-90007, *RTE-DOS HP 2767 Line Printer Driver Manual*.

- d. Real Time Executive (RTE) Operating System Driver (Relocatable Binary). Option 12996A-422 includes the following:

Driver tape, part no. 29028-60002, DVR 12; Manual, part no. 09600-93006, *RTE HP 2767 Line Printer Driver Manual*.

Also refer to the overall RTE driver manual *RTE Operating System Drivers and Device Subroutine Programming and Operating Manual*, part no. 92200-

93005 which is supplied with RTE systems.

3-12. SIO drivers are used in programs to minimize memory requirements when execution time requirements are not critical. The HP 9866A Line Printer uses the same SIO driver as the HP 2767A Line Printer. SIO drivers occupy an absolute location in upper memory and therefore differ in memory location for various memory sizes. SIO drivers for the various memory sizes (listed above) are available from Hewlett-Packard and are furnished with the system when the line printer subsystem and its software options are ordered as components of the system.

3-13. BCS, DOS, and RTE software operating procedures are contained in separate manuals. These manuals are included with their respective drive tapes when options 12996A-423, 12996A-421, and 12996A-422 are ordered.

4-1. INTRODUCTION

4-2. The HP 12996A Line Printer Subsystem can be programmed without a driver to print on a line-to-line basis (no motion requests). Adding one of the drivers to the operating system as described in paragraph 3-10 adds other capabilities such as double spacing and advancing lines. The line printer will perform all motion functions as described in the applicable driver manual except for "top-of-form". ASCII characters are printed according to seven bits of the data word where bit 0 is the least significant bit of the ASCII code. Printed character binary and octal codes are given in Appendix A.

4-3. Operation with BCS, DOS, and RTE drivers is in the interrupt mode without DCPC (DMA). Programming information is the same as for the HP 2767 Line Printer which is provided in the driver manuals supplied with your software operating system. The exceptions to this information are given below.

4-4. CONTROL FUNCTIONS

4-5. The subsystem contains the two control functions of PRINT and Clear Line Buffer (CLB) in addition to the interface control and flag functions. The PRINT command is issued in the printer when a LINE FEED (ASCII 0001010) character is received from the interface after all printable characters in a row have been entered. Two LINE FEED characters will advance the paper one print line.

4-6. The CLB command clears all characters in the printer input registers and resets the character pointer to the left margin. The flag must be set (low) for this function to operate. CLB is issued when bit 15 is set in a word transferred from the interface. To clear any residual characters in the printer, then, program a data word to the printer with a *one* in the most significant bit.

4-7. DATA WORD

4-8. The data words for ASCII characters to be printed are loaded into the printer with a data transfer program as shown in figure 4-1. The seven bits of ASCII code must be in bits 0 thru 6 where bit 0 holds the least significant bit.

4-9. STATUS BIT

4-10. The line printer provides an Out-of-Paper (OTP) signal when the paper roll is empty. This signal appears at the interface on its data input (from device) bit 0. At suitable intervals in the program, test for this bit by transferring a status word from the printer to the computer by using an LIAXX instruction, where XX is the select code of the printer. The presence of the bit 0 being set may then be used to initiate an "out-of-paper" message to the operator and halt the transfer of input data words to the printer.

| | | | |
|-------|-----------|------|------------------------------------|
| START | LDA | DATA | Load A with Data to be transferred |
| | OTAXX | | Output Data to Printer |
| | STCXX | | Start Handshake |
| | SFSXX | | Wait for Completion Flag |
| | JMP* - 1 | | |
| | JMP START | | |

NOTE

Repeat above routine twice where DATA is Line Feed Code 012 (octal) to print character.

Figure 4-1. Data Transfer Program

5-1. INTRODUCTION

5-2. The HP 9866A Line Printer should be cleaned and checked at least once every three months. Where there appears to be a problem in subsystem operation, isolate the trouble to an individual assembly and then refer to the appropriate manual for instructions.

5-3. Verify subsystem operation and isolate malfunctions of the interface and line printer with the HP 9866A/12566B Line Printer and Interface Diagnostic furnished on paper tape, part no. 12996-16001. For instructions on using the diagnostic, refer to the *HP 9866A/12566B Line Printer and Interface Diagnostic Reference Manual*, part no. 12996-90001.

5-4. If the trouble seems to be associated with the interface PCA, use the information provided by the diagnostic test as a guide to troubleshooting the PCA. Interface PCA information is given in the *HP 12556B Microcircuit Interface Kit Operating Service Manual*, part no. 12566-90019.

5-5. Where a control, flag signal, or data signal appears to be missing, the problem may be caused by a broken wire or connector in the interface cable. The interface connections are identified in figure 2-1.

5-6. CLEANING PRINTER

5-7. Clean fan filter (located at back of printer) at least once every three months. The filter can be removed by prying it out with a screw driver. Clean filter by rinsing it out in water and dry it completely before re-installing it.

5-8. The roller and platen which feeds the paper should be wiped clean on each service call. To access these parts, follow the disassembly instructions in the *HP 9866A Printer Service Manual*, part no. 09866-90030.

5-9. The outside of the line printer can be cleaned with a soft, damp cloth. **DO NOT USE ABRASIVE CLEANERS AND DO NOT LET MOISTURE GET INSIDE THE PRINTER.**

5-10. LINE PRINTER TROUBLESHOOTING

5-11. For information on troubleshooting and repair of the HP 9866A Line Printer refer to the *HP 9866A Printer Service Manual*, part no. 09866-90030. Disassembly instructions and print head alignment procedures are covered in this manual.

HP 9866A PRINTER CHARACTER BINARY AND OCTAL CODES

APPENDIX

A

Printer Character Binary and Octal Codes

| CHARACTER | BINARY DO6543210 | OCTAL EQUIV. | CHARACTER | BINARY DO6543210 | OCTAL EQUIV. |
|-----------|---------------------|-----------------|---------------|---------------------|-----------------|
| (a) | 1000000 | 100 | @ | 1100000 | 140 |
| A | 1000001 | 101 | A | 1100001 | 141 |
| B | 1000010 | 102 | B | 1100010 | 142 |
| C | 1000011 | 103 | C | 1100011 | 143 |
| D | 1000100 | 104 | D | 1100100 | 144 |
| E | 1000101 | 105 | E | 1100101 | 145 |
| F | 1000110 | 106 | F | 1100110 | 146 |
| G | 1000111 | 107 | G | 1100111 | 147 |
| H | 1001000 | 110 | H | 1101000 | 150 |
| I | 1001001 | 111 | I | 1101001 | 151 |
| J | 1001010 | 112 | J | 1101010 | 152 |
| K | 1001011 | 113 | K | 1101011 | 153 |
| L | 1001100 | 114 | L | 1101100 | 154 |
| M | 1001101 | 115 | M | 1101101 | 155 |
| N | 1001110 | 116 | N | 1101110 | 156 |
| O | 1001111 | 117 | O | 1101111 | 157 |
| P | 1010000 | 120 | P | 1110000 | 160 |
| Q | 1010001 | 121 | Q | 1110001 | 161 |
| R | 1010010 | 122 | R | 1110010 | 162 |
| S | 1010011 | 123 | S | 1110011 | 163 |
| T | 1010100 | 124 | T | 1110100 | 164 |
| U | 1010101 | 125 | U | 1110101 | 165 |
| V | 1010110 | 126 | V | 1110110 | 166 |
| W | 1010111 | 127 | W | 1110111 | 167 |
| X | 1011000 | 130 | X | 1111000 | 170 |
| Y | 1011001 | 131 | Y | 1111001 | 171 |
| Z | 1011010 | 132 | Z | 1111010 | 172 |
| [| 1011011 | 133 | [| 1111011 | 173 |
| \ | 1011100 | 134 | \ | 1111100 | 174 |
| } | 1011101 | 135 | } | 1111101 | 175 |
| ↑ | 1011110 | 136 | ↑ | 1111110 | 176 |
| - (minus) | 1011111 | 137 | ! | 0100001 | 041 |
| SPACE | 0100000 | 040 | " | 0100010 | 042 |
| * | 0101010 | 052 | # | 0100011 | 043 |
| + | 0101011 | 053 | \$ | 0100100 | 044 |
| ,(comma) | 0101100 | 054 | % | 0100101 | 045 |
| - | 0101101 | 055 | & | 0100110 | 046 |
| . | 0101110 | 056 | '(apost.) | 0100111 | 047 |
| / | 0101111 | 057 | (| 0101000 | 050 |
| 0 | 0110000 | 060 |) | 0101001 | 051 |
| 1 | 0110001 | 061 | : | 0111010 | 072 |
| 2 | 0110010 | 062 | ; | 0111011 | 073 |
| 3 | 0110011 | 063 | < | 0111100 | 074 |
| 4 | 0110100 | 064 | = | 0111101 | 075 |
| 5 | 0110101 | 065 | > | 0111110 | 076 |
| 6 | 0110110 | 066 | ? | 0111111 | 077 |
| 7 | 0110111 | 067 | LF (linefeed) | 0001010 | 012 |
| 8 | 0111000 | 070 | | | |
| 9 | 0111001 | 071 | | | |



SALES & SERVICE OFFICES

UNITED STATES

ALABAMA
8290 Whitesburg Dr., S.E.
P.O. Box 4207
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

Medical Only
228 W. Valley Ave.,
Room 220
Birmingham 35209
Tel: (205) 942-2081

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
2424 East Aragon Rd.
Tucson 85706
Tel: (602) 294-3148

ARKANSAS
Medical Service Only
P.O. Box 5846
Brady Station
Little Rock 72205
Tel: (501) 664-8773

CALIFORNIA
1430 East Orangehorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

6305 Arizona Plaza
Los Angeles 90045
Tel: (213) 649-2511
TWX: 910-328-6147

Los Angeles
Tel: (213) 776-7500
3003 Scott Boulevard
La Brea 90500
Tel: (213) 249-7000
910-338-0518

San Francisco
Tel: (415) 446-6165
2220 Watt Ave.
Sacramento 95825
Tel: (916) 482-1463

9606 Aero Drive
P.O. Box 23333
San Diego 92123
Tel: (714) 279-3200

COLORADO
5600 South Ulster Parkway
Englewood 80110
Tel: (303) 771-3455

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA
P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

Jacksonville
Medical Service Only
Tel: (904) 725-6333

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando 32809
Tel: (305) 859-2900
TWX: 810-850-0311

P.O. Box 12826
Panama City 32375
Tel: (904) 434-3081

GEORGIA
P.O. Box 105005
Atlanta 30348
Tel: (404) 434-4000
TWX: 810-766-4890

Medical Service Only
Augusta 30903
Tel: (404) 736-0592

HAWAII
2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455

ILLINOIS
5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

St. Joseph
Tel: (217) 469-2133

INDIANA
7301 North Shadeland Ave.
Indianapolis 46250
Tel: (317) 842-1000
TWX: 810-260-1796

IOWA
1902 Broadway
Iowa City 52240
Tel: (319) 338-9466
Night: (319) 338-9467

KANSAS
Derby
Tel: (316) 267-3655

KENTUCKY
Medical/Calculator Only
Atkinson Square
3901 Atkinson Dr.
Louisville 40218
Tel: (502) 456-1573

LOUISIANA
P.O. Box 840
3239 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-9157

2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Laxington 02173
Tel: (617) 861-8960
TWX: 910-326-6904

MICHIGAN
23855 Research Drive
Farmington Hills 48024
Tel: (313) 476-6400
TWX: 810-242-2900

MINNESOTA
2400 N. Prior Ave.
Roseville 55113
Tel: (612) 636-0700
TWX: 910-563-3734

MISSISSIPPI
Jackson
Medical Service Only
Tel: (601) 982-9363

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087
148 Weldon Parkway
Maryland Heights 63043
Tel: (314) 567-1455
TWX: 710-764-0830

NEBRASKA
P.O. Box 840
7171 Mercy Road
Suite 10
Omaha 68106
Tel: (402) 392-0948

NEW JERSEY
W. 120 Century Rd.
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

NEW MEXICO
P.O. Box 11634
Station E
11300 Lomas Blvd., N.E.
Albuquerque 87123
Tel: (505) 292-1330
TWX: 910-989-1185

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-441-8270

New York City
Manhattan, Bronx
Contact Paramus, NJ Office
Tel: (212) 265-5000
Brooklyn, Queens, Richmond
Contact Woodbury, NY Office
Tel: (516) 921-0300

201 South Avenue
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

5858 East Molloy Road
Syracuse 13211
Tel: (315) 455-2486
TWX: 710-541-0482

1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
TWX: 710-990-4951

NORTH CAROLINA
P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 510-926-1516

OHIO
16500 Sprague Road
Cleveland 44130
Tel: (216) 243-7300
TWX: 810-423-9431

ONTARIO
Hewlett-Packard (Canada) Ltd.
1785 Woodward Dr.
Ottawa K2C 0P9
Tel: (613) 225-6530
TWX: 610-422-3022
TLX: 05-821521 HPCL

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
Mississauga L4V 1L9
Tel: (416) 678-9430
TWX: 610-492-4246

330 Progress Rd.
Dayton 45449
Tel: (513) 859-8202
TWX: 810-474-2818
1041 Kingsmill Parkway
Columbus 43229
Tel: (614) 436-1041

OKLAHOMA
P.O. Box 32008
Oklahoma City 73132
Tel: (405) 721-0200
TWX: 910-830-6862

OREGON
17890 SW Lower Boones
Ferry Road
Tualatin 97062
Tel: (503) 620-3350

PENNSYLVANIA
111 Zeta Drive
Pittsburgh 15238
Tel: (412) 782-0400
Night: 782-0401
TWX: 710-795-3124
1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

SOUTH CAROLINA
6941-0 N. Trenholm Road
Columbia 29260
Tel: (803) 782-6493

TENNESSEE
Memphis
Medical Service Only
Tel: (901) 274-7472

Nashville
Medical Service Only
Tel: (615) 244-5448

TEXAS
P.O. Box 1270
201 E. Arapahoe Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

P.O. Box 27409
6300 Westpark Drive
Suite 100
Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645
205 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-8241
TWX: 910-871-1170

UTAH
2160 South 3270 West Street
Salt Lake City 84119
Tel: (801) 487-0715

VIRGINIA
Medical Only
P.O. Box 12778
No. 7 Koger Exec. Center
Suite 212
Norfolk 23502
Tel: (804) 497-1026/7

P.O. Box 9854
2914 Hungry Springs Road
Richmond 23228
Tel: (804) 285-3431
TWX: 710-956-0157

WASHINGTON
Bellevue Office Pk
1203-114th Ave. S.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2446

WEST VIRGINIA
Medical/Analytical Only
Charleston
Tel: (304) 345-1640

WISCONSIN
9004 West Lincoln Ave
West Allis 53227
Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED:
Contact the regional office
nearest you: Atlanta, Georgia
North Hollywood, California
Rockville, Maryland
Skokie, Illinois
Their complete
addresses are listed above

*Service Only

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11748 Kingsway Ave.
Edmonton T5G 0X5
Tel: (403) 452-3670
TWX: 610-831-2431 EOTH
Hewlett-Packard (Canada) Ltd.
915-42 Avenue S.E. Suite 102
Calgary T2G 1Z1
Tel: (403) 287-1672
TWX: 610-821-6141

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
837 E. Cordova Street
Vancouver V6A 3R2
Tel: (604) 254-0531
TWX: 610-922-5059 VCR

MANITOBA
Hewlett-Packard (Canada) Ltd.
513 Century St.
St. James
Winnipeg R3H 0L8
Tel: (204) 766-7581
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
800 Windmill Road
P.O. Box 931
Dartmouth B2Y 3Z6
Tel: (902) 469-7820
TWX: 610-271-4482 HFX

ONTARIO
Hewlett-Packard (Canada) Ltd.
1785 Woodward Dr.
Ottawa K2C 0P9
Tel: (613) 225-6530
TWX: 610-422-3022
TLX: 05-821521 HPCL
Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
Mississauga L4V 1L9
Tel: (416) 678-9430
TWX: 610-492-4246

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Blvd.
Pointe Claire H9R 1G7
Tel: (514) 497-4232
TWX: 610-422-3022
TLX: 05-821521 HPCL

Hewlett-Packard (Canada) Ltd.
2376 Galvan Street
St-Foy G1N 4G4
Tel: (418) 688-8710
TWX: 610-571-5525

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada)
Ltd. in Mississauga

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina
S.A. C. e. I.
Lavalle 1171-3° Piso
Buenos Aires
Tel: 35-0436, 35-0627, 35-0341
Telex Public Booth No. 9
Cable: HEWPACK ARG

BOLIVIA
Stambuk & Mark (Bolivia) Ltda.
Av. Mariscal, Santa Cruz 1342
Le Paz
Tel: 40626, 53163, 52421
Telex: 3560014
Cable: BUKMAR

BRAZIL
Hewlett-Packard Oo Brasil
I.E.C. Ltda.
Rua Frei Caneca, 1140/52 Bela Vista
01307-São Paulo-SP
Tel: 288-71-11, 287-81-20,
17-61-93
391-82-3602 HPBR-BR
HEWPACK São Paulo

Hewlett-Packard Oo Brasil
I.E.C. Ltda.
Praça Dom Feliciano, 78-8°
andar (Sala 806/8)
90000-Porto Alegre-RS
Tel: 25-84-70-DDD (0512)
Cable: HEWPACK Porto Alegre

Hewlett-Packard Oo Brasil
I.E.C. Ltda.
Rua Siqueira Campos, 53, 4°
andar, Copacabana
20000-Rio de Janeiro-GB
Tel: 257-80-94-DDD (021)
Telex: 399-212-8905 HEWP-BR
Cable: HEWPACK
Rio de Janeiro

CHILE
Calcagni y Melcaide Ltda.
Alameda 580-01, 807
Casille 2118
Santiago, 1
Tel: 396613
Telex: 350001 CALMET
Cable: CALMET Santiago

Medical Only
General Machinery Co., Ltda.
Paraguay 494
Casilla 13910
Santiago
Tel: 31123, 31124
Cable: GEMCO Santiago

COLOMBIA
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-75
Apartado Aéreo 6287
Bogotá, I.O.E.
Tel: 69-88-77
Cable: AARIS Bogotá
Tel: 044-400

COSTA RICA
Gentilica Costarricense S.A.
Calle Central, Avenidas 1 y 3
Apartado 10159
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR
Medical Only
A.F. Viscaino Compañía Ltda.
Av. Rio Amazonas No. 239
P.O. Box 2925
Quito
Tel: 527-088, 527-804
Cable: ASTOR Quito

Calculators Only
Computadoras y Equipos
Electrónicos
P.O. Box 2695
Avda. 12 de Octubre No. 2207
Quito
Tel: 233869, 236783
Telex: 02-2113 Sagita Ed
Cable: Sagita-Quito

EL SALVADOR
IPESA
Bulevar de los Heroes II-48
San Salvador
Tel: 252787

GUATEMALA
IPESA
Avenida La Reforma 3-48,
Zona 9
Guatemala City
Tel: 63627, 64786
Telex: 4192 Teletro Gu

MEXICO
Hewlett-Packard Mexicana,
S.A. de C.V.
Torres Adalid No. 21, 11° Piso
Col. del Valle
Mexico 12, O.F.
Tel: (905) 543-42-32
Telex: 017-74-507

Hewlett-Packard Mexicana,
S.A. de C.V.
Ave. Constitución No. 2184
Monterrey, N.L.
Tel: 48-71-32, 48-71-84
Telex: 038-843

NICARAGUA
Roberto Terán G
Apartado Postal 689
Edificio Segre
Managua
Tel: 25114, 23412, 23454
Cable: ROTERAN Managua

PANAMA
Electrónico Balboa, S.A.
P.O. Box 4929
Calle Samuel Lewis
Ciudad de Panamá
Tel: 64-2700
Telex: 3431103 Curunda,
Canal Zone
Cable: ELECTRON Panama

PARAGUAY
Z.J. Melamed S.R.L.
División Aparatos y Equipos
Médicos
División Aparatos y Equipos
Científicos y de Investigación
P.O. Box 676
Calle 482, Edificio Victoria
Tel: 4-5069, 4-6272
Cable: RAMEL

PERU
Compañía Electro Médica S.A.
Los Flamencos 145
San Isidro Casilla 1030
Lima 1
Tel: 413485
Cable: ELMEO Lima

PUERTO RICO
Hewlett-Packard Inter-Américas
Puerto Rico Branch Office
P.O. Box 29081
55th Inf. Station
San Juan 00929
Calle 272, Urb. Country Club
Carolina 00639
Tel: (809) 762-7355/7455/7655
Telex: 3450514

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RAQIUM Montevideo

VENEZUELA
Hewlett-Packard de Venezuela
C.A.
Apartado 50933, Caracas 105
Edificio Segre
Tercera Transversal
Los Ruices Norte
Caracas 107
Tel: 35-01-07, 35-00-84,
35-00-65, 35-00-30
Telex: 25146 HEWPACK
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT:
Hewlett-Packard
Inter-Américas
3200 Hillview Ave
Palo Alto, California 94304
Tel: (415) 493-1501
TWX: 910-373-1260
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

EUROPE

| | | | | | | |
|---|--|--|---|---|---|--|
| <p>AUSTRIA Hewlett-Packard Ges. m. b. H Handelska 52/3 P. O. Box 7 A-1205 Vienna Tel: (0222) 35 16 21 to 32 Cable: HEWPAK Vienna Telex: 75923 hewpak a</p> <p>BELGIUM Hewlett-Packard Benelux S.A. N.V. Avenue du Col-Vert, 1, (Grootenkaaglaan) B-1170 Brussels Tel: (02) 672 22 40 Cable: PALOBEN Brussels Telex: 23 494 paloben br</p> <p>DENMARK Hewlett-Packard A/S Datavej 52 DK-3460 Birkerød Tel: (02) 81 66 40 Cable: HEWPAK AS Telex: 166 40 hpas Hewlett-Packard A/S Navervej 1 DK-8600 Silkeborg Tel: (06) 82 71 65 Telex: 166 40 hpas Cable: HEWPAK AS</p> <p>FINLAND Hewlett-Packard OY Nankahousentie 5 P. O. Box 6 SF-00211 Helsinki 21 Tel: 6923031 Cable: HEWPAK OY Helsinki Telex: 12 1563</p> <p>FRANCE Hewlett-Packard France Quartier de Courtabouet Boite Postale No 12 F-91401 Dracy Tel: (1) 907 78 25 Cable: HEWPAK Orsay Telex: 500048 Hewlett-Packard France "Le Saquin" Chemin des Mouilles Boite Postale No 12 F-69130 Ecullay Tel: (78) 33 81 25 Cable: HEWPAK Ecullay Telex: 310617 Hewlett-Packard France Agence Régionale Périmètre de la Cépérie Chemin de la Cépérie, 20 F-31300 Toulouse-La Mirail Tel: (61) 40 11 12 Telex: 510957</p> | <p>Hewlett-Packard France Agence Régionale Aéroport principal de Marseille-Margone F-13721 Marignane Tel: (91) 89 12 36 Cable: HEWPAK MARGN Telex: 410774F Hewlett-Packard France Agence Régionale 53, Avenue de Rochester F-35000 Rennes Tel: (99) 36 33 21 Cable: HEWPAK 74912 Telex: 740912F Hewlett-Packard France Agence Régionale 74, Allée de la Robertsau F-67000 Strasbourg Tel: (88) 35 23 20/21 Telex: 890141 Cable: HEWPAK STRBG Medical/Calculator Only Hewlett-Packard France Agence Régionale Centre Vauban 201, rue Colbert Enfrée A2 F-59000 Lille Tel: (20) 51 44 14 Telex: 820744</p> <p>GERMAN FEDERAL REPUBLIC Hewlett-Packard GmbH Verteilszentrale Frankfurt Bernstrasse 117 Postfach 560 140 D-6000 Frankfurt 56 Tel: (0611) 50 04-1 Cable: HEWPAKSA Frankfurt Telex: 04 13249 hpFFmd Hewlett-Packard GmbH Technisches Büro Böblingen Herrnbergerstrasse 130 D-7030 Böblingen, Württemberg Tel: (07031) 867-1 Cable: HEWPAK Böblingen Telex: 07265739 bbn Hewlett-Packard GmbH Technisches Büro Düsseldorf Emanuel-Leutze-Str. 1 (Seestern) D-4000 Düsseldorf Tel: (0211) 59711 Telex: 85/86 533 hppd d Hewlett-Packard GmbH Technisches Büro Hamburg Wendenstrasse 23 D-2000 Hamburg 1 Tel: (040) 24 13 93 Cable: HEWPAKSA Hamburg Telex: 21 63 032 hphd d</p> | <p>Hewlett-Packard GmbH Technisches Büro Hannover Mellendorfer Strasse 3 D-3000 Hannover-Kleefeld Tel: (0511) 55 60 46 Telex: 092 3259 Hewlett-Packard GmbH Technisches Büro Nuremberg Neumeyer Str. 90 D-8500 Nuremberg Tel: (0911) 56 30 63/85 Telex: 0623 860 Hewlett-Packard GmbH Technisches Büro München Unterhachinger Strasse 28 ISAR Center D-8012 Ottobrunn Tel: (089) 601 30 61/7 Telex: 52 49 85 Cable: HEWPAKSA München Telex: 0524985 (West Berlin) Hewlett-Packard GmbH Technisches Büro Berlin Kottb Strasse 2-4 D-1000 Berlin 30 Tel: (030) 24 90 86 Telex: 18 3405 hpbld d</p> <p>GREECE Kostas Karayannis 18, Ermou Street GR-Athens 126 Tel: 3237731 Cable: RAKAR Athens Tel: 21 59 62 rkar gr Analytical Only "INTECO" G. Papathanassiou & Co. Marini 17 GR - Athens 103 Tel: 521 915 Cable: INTEKNIKA Telex: 21 5329 INTE GR Medical Only Technomed Hellas Ltd. 52, Skouta Street GR - Athens 135 Tel: 626 972.663.930.614.959 Cable: ETALAK Athens Telex: 21-4693 ETAL GR</p> <p>ICELAND Medical Only Elding Trading Company Inc. Hafnarhvoli - Tryggvatolet IS-Reykjavik Tel: 1 58 20 Cable: ELIDING Reykjavik</p> | <p>IRAN Hewlett-Packard Iran Ltd. Mir-Emad Avenue 14th Street No 19 IR-Tehran Tel: 85 10 82/86 IRELAND Hewlett-Packard Ltd. King Street Lane Winnesh, Wokingham GB-Berkshire RG11 5AR Tel: (0734) 78 47 74 Telex: 847178/848179 ITALY Hewlett-Packard Italiana S.p.A. Casella postale 3645 I-20124 Milano Tel: (2) 6251 (10 lines) Cable: HEWPAKIT Milano Telex: 32046 Hewlett-Packard Italiana S.p.A. Via Pietro Maroncelli 40 (ang. Via Visentin) I-35100 Padova Tel: (49) 66 48 88 Telex: 32046 via Milano Medical only Hewlett-Packard Italiana S.p.A. Via d'Agnardi, 7 I-56100 Pisa Tel: (050) 2 32 04 Telex: 32046 via Milano Hewlett-Packard S.p.A. Via G. Arminelli 10 I-00143 Roma-Eur Tel: (06) 54 69 61 Telex: 6154 Cable: HEWPAKIT Roma Hewlett-Packard Italiana S.p.A. Via San Quintino, 46 I-10121 Torino Tel: 53 82 64/54 84 88 Telex: 32046 via Milano Medical/Calculators Only Hewlett-Packard Italiana S.p.A. Via Principe Nicola 43 G/C I-95126 Catania Tel: (095) 37 05 05 Hewlett-Packard Italiana S.p.A. Via Amerigo Vesputici, 9 I-80142 Napoli Tel: (81) 33 77 11 Hewlett-Packard Italiana S.p.A. Via E. Masi, 8/8 I-40137 Bologna Tel: (051) 30 78 87</p> | <p>LUXEMBURG Hewlett-Packard Benelux S.A. N.V. Avenue du Col-Vert, 1, (Grootenkaaglaan) B-1170 Brussels Tel: (02) 672 22 40 Cable: PALOBEN Brussels Telex: 23 494 NETHERLANDS Hewlett-Packard Benelux N.V. Edificio Albia II 7° B E-Bilbao Tel: 23 83 06/23 82 06 Calculators Only Hewlett-Packard Española S.A. Gran Via Fernando El Católico, 67 E-Valencia-8 Tel: 326 67 28/326 85 55 NDRWAY Hewlett-Packard Norge A/S Nesveien 13 Box 149 N-1344 Haslum Tel: (02) 53 83 60 Telex: 16621 hpnas n POLAND BIURO INFORMACJI TECHNICZNEJ Hewlett-Packard Ul. Stawki 2 6P 00-950 Warsaw Tel: 39 67 43 Telex: 81 24 53 hepa pl PORTUGAL Hewlett-Packard S.A. Equipamentos Eléctricos S. a. r. l. Rua Rodrigo da Fonseca 103 P. O. Box 2531 P-Lisbon 1 Tel: (19) 68 60 72 Cable: TELECTRA Lisbon Telex: 12598 Mundtner Intercomércio Mundial de Comércio S. a. r. l. Av. A. A. de Aguiar 138 P. O. Box 2761 P-Lisbon 1 Tel: (19) 53 21 31/7 Cable: INTERCAMBIO Lisbon RUMANIA Hewlett-Packard Technical Office BD N. B. Balcescu 16 Bucharest Tel: 1580 23/138885 Telex: 10440 SPAIN Hewlett-Packard Española, S.A. Jerez No. 3 E-Madrid 16 Tel: (1) 458 26 00 (10 lines) Telex: 23515 hpe</p> | <p>Hewlett-Packard Española, S.A. Milanense 21-23 E-Barcelona 17 Tel: (3) 203 6200 (5 lines) Telex: 52603 hpe e Hewlett-Packard Española, S.A. Av. Ramón y Cajal 1-9° (Edificio Sevilla I) E-Sevilla 15 Tel: 64 44 54/58 Hewlett-Packard española S.A. Edificio Albia II 7° B E-Bilbao Tel: 23 83 06/23 82 06 Calculators Only Hewlett-Packard Española S.A. Gran Via Fernando El Católico, 67 E-Valencia-8 Tel: 326 67 28/326 85 55 SWEDEN Hewlett-Packard Sverige AB Engströmsgatan 3 Fack S-161 20 Bromma 20 Tel: (08) 730 05 50 Cable: MEASUREMENTS Stockholm Telex: 10721 Hewlett-Packard Sverige AB Frottgatan 30 S-421 32 Västra Frölunda Tel: (031) 49 09 50 Telex: 10721 Via Bromma Office SWITZERLAND Hewlett-Packard (Schweiz) AG Zürcherstrasse 20 P. O. Box 307 CH-8952 Schlieren Zurich Tel: (01) 98 18 21 Cable: HPAG CH Telex: 53933 hpag ch Hewlett-Packard (Schweiz) AG 9, Chemin Louis-Pictet CH-1214 Vernier Geneva Tel: (022) 41 49 50 Cable: HEWPAK Geneva Telex: 27 333 hpag ch TURKEY Technical Engineering Bureau P. O. Box 437 E-Moscow 101000 Tel: 294 2024 TR-Istanbul Tel: 49 40 40 Cable: TELEATION Istanbul</p> | <p>UNITED KINGDOM Hewlett-Packard Ltd King Street Lane GB-Winnesh, Wokingham Berks. RG11 5AR Tel: (0734) 78 47 74 Cable: Hewpie London Telex: 847178/9 Hewlett-Packard Ltd "The Grattons" Stamford New Road GB-Altrincham Cheshire WA14 10J Tel: (061) 928 902-1 Cable: Hewpie Manchester Telex: 668068 Hewlett-Packard Ltd Lygon Court Dudley Road GB-Halsawen, Worcs Tel: (021) 550 7053 Telex: (021) 550 72/3 Hewlett-Packard Ltd 4th Floor Wedge House 799, London Road GB-Thornthorn Heath CR4 6XL Surrey Tel: (01) 684 0103/0105 Telex: 946825 Hewlett-Packard Ltd c/o Makro South Service Wholesale Centre West Industrial Estate Washington GB-New Town, County Durham Tel: Washington 464001 ext. 57/58 Hewlett-Packard Ltd's registered address for V.A.T. purposes only 70, Finsbury Pavement GB-London. EC2A1SX Registered No 690597 USSR Hewlett-Packard Representative Office USSR Pokrovsky Boulevard 4/17, Suite 12 Moscow 101000 Tel: 294 2024 Telex: 7825 hewpak SU YUGOSLAVIA Iskra-standard/Hewlett-Packard Office Mikloševa 38/VII 61000 Ljubljana Tel: 315-879/321-674 Telex: 31583 YU HEWPAK</p> |
|---|--|--|---|---|---|--|

AFRICA, ASIA, AUSTRALIA

| | | | | | |
|---|---|---|---|--|--|
| <p>AMERICAN SAMOA Calculators Only Oceanic Systems Inc. P. O. Box 777 Pago Pago Bayfront Road Pago Pago 96799 Tel: 633-5513 Cable: OCEANIC-Pago Pago ANGOLA Teletra Empresa Técnica de Equipamentos Eléctricos, S.A. R. L. R. Barbosa Rodrigues, 42-FDT Caixa Postal, 6487 Luanda Tel: 3551/56 Cable: TELECTRA Luanda AUSTRALIA Hewlett-Packard Australia Pty Ltd 31-41 Joseph Street Blackburn, Victoria 3130 P. O. Box 36 Dunconster East, Victoria 3109 Tel: 89-6351 Telex: 31-024 Cable: HEWPARO Melbourne Hewlett-Packard Australia Pty Ltd 31 Bridge Street Pyrmont New South Wales, 2073 Tel: 449-6566 Telex: 21561 Cable: HEWPARO Sydney Hewlett-Packard Australia Pty Ltd 153 Greenhill Road Perth, 6063, S.A. Tel: 27-2591 Telex: 82536 AOEL Cable: HEWPARO AOELADE Hewlett-Packard Australia Pty Ltd 1411 Sirling Highway Nedlands, W.A. 6009 Tel: 86-455 Telex: 93859 PERTH Cable: HEWPARO PERTH Hewlett-Packard Australia Pty Ltd 121 Wollongong Street Fyshwick, A.C.T. 2609 Tel: 95-3733 Telex: 62850 Canberra Cable: HEWPARO CANBERRA Hewlett-Packard Australia Pty Ltd 5th Floor Teachers Union Building 495-499 Boundary Street Spring Hill, 4000 Queensland Tel: 29 1544 Telex: 42133 BRISBANE CYPRUS Kyprons 19 Gregorios & Xenopoulos Rd P. O. Box 1152 CY-Nicosia Tel: 45628/29 Cable: KYPRONICS PANDEHIS</p> | <p>GUAM Medical/Pocket Calculators Only Guam Medical Supply, Inc. Jay Ease Building, Room 210 P. O. Box 8383 Tamuning 96911 Tel: 648-4513 Cable: EARMED Guam HONG KONG Schmidt & Co (Hong Kong) Ltd P. O. Box 297 Connaught Centre 39th Floor Connaught Road, Central Hong Kong Tel: H-255291-5 Telex: 74766 SCHMC HK Cable: SCHMIDTCO Hong Kong INDIA Blue Star Ltd Kastur Buildings Jamsheji Tata Rd Bombay 400 020 Tel: 29 50 21 Telex: 2156 Cable: BLUEFROST Blue Star Ltd Sahas 414/2 Vir Savarkar Marg Prabhadevi Bombay 400 025 Tel: 45 78 87 Telex: 4093 Cable: FROSTBLUE Blue Star Ltd Band Box House Prabhadevi Bombay 400 025 Tel: 45 73 01 Telex: 3751 Cable: BLUESTAR Blue Star Ltd 14/40 Civil Lines Kanpur 208 001 Tel: 6 88 82 Telex: 292 Cable: BLUESTAR Blue Star Ltd 7 Hare Street P. O. Box 506 Calcutta 700 001 Tel: 23-0131 Telex: 7655 Cable: BLUESTAR Blue Star Ltd Blue Star House 34 Mahatma Gandhi Rd Lalpur New Delhi 110 024 Tel: 62 32 76 Telex: 2463 Cable: BLUESTAR Blue Star Ltd 11/11A Magarath Road Bangalore 560 025 Tel: 55668 Telex: 430 Cable: BLUESTAR</p> | <p>Blue Star Ltd Mechanical, Mandirani xxx/1678 Mahatma Gandhi Rd Cochin 682 016 Kerala Tel: 32069, 32161, 32282 Telex: 046 514 Cable: BLUESTAR Blue Star Ltd 1-1-1171 Sarogini Devi Road Secunderabad 500 003 Tel: 70126, 70127 Cable: BLUEFROST Telex: 459 Blue Star Ltd 23/24 Second Line Beach Medra 500 001 Tel: 23954 Telex: 379 Cable: BLUESTAR Blue Star Ltd Nathraj Mansions 2nd Floor Bistapur Jawaharpur 831 001 Tel: 7383 Cable: BLUESTAR Telex: 240 INDONESIA BERCA Indonesia P.T. P. O. Box 496 1st Floor J.L., Cikini Raya 61 Jakarta Tel: 56038, 40369, 49886 Telex: 42895 Cable: BERACON BERCA Indonesia P.T. 63 J.L. Raya Gubeng Surabaya Tel: 44309 IRAN Hewlett-Packard Iran Ltd Mir-Emad Ave 14th Street, No 19 IR-Tehran Tel: 851082/86 Telex: 21 25 74 ISRAEL Electronics & Engineering Ov of Motorola Israel Ltd 16 Kremenetski Street P. O. Box 25016 Tel-Aviv Tel: 38973 Telex: 33569 Cable: BASTEL Tel-Aviv</p> | <p>JAPAN Yokogawa Hewlett-Packard Ltd Onashi Building 1-59-1 Yoyogi Shibuya-ku, Tokyo Tel: 03-370-2281/92 Telex: 232-2024YHP Cable: YHPMARKET TOK 32-724 Yokogawa Hewlett-Packard Ltd Nissei Ibaraki Building 2-8 Kasuga 2-chrome, Ibaraki-shi Osaka 567 Tel: (0726) 23-1641 Telex: 5332-385 YHP OSAKA Yokogawa-Hewlett-Packard Ltd Nakazaki Building 24 Kam Sasama-cho Nakamura-ku, Nagoya . 450 Tel: (052) 571-5171 Yokogawa-Hewlett-Packard Ltd Kanagawa Building 2-24-1 Tsuruya-cho Kanagawa-ku Yokohama, 221 Tel: 045-312-1252 Telex: 382-3204 YHP YOK Yokogawa-Hewlett-Packard Ltd Mito Mitsui Building 105, 1-chrome, San-no-maru Mito, Ibaragi 310 Tel: 0292-25-7470 Yokogawa-Hewlett-Packard Ltd Inoue Building 1348-3, Asahi-cho, 1-chrome Atsugi, Kanagawa 243 Tel: 0462-24-0452 KENYA Technical Engineering Services(E A) L., P. O. Box 18311 Nairobi Tel: 557726/556762 Cable: PROTON Medical Only International Aeradio(E A) L., P. O. Box 19012 Nairobi Airport Nairobi Tel: 336055/56 Telex: 22201/22301 Cable: INTAERID Nairobi KOREA American Trading Company Korea C.P.O. Box 1103 Dae Kyung Bldg., 8th Floor 107 Sejong-Ro Chongro-Ku, Seoul Tel: (4 lines) 73-8924-7 Tel: K-28338 Cable: AMTRACO Seoul LEBANON Constantin E. Macnrdi Clemenceau Street 34 P. O. Box 7213 Ri-Balrut Tel: 36 63 97/8 Telex: 21114 Leb Cable: ELECTRONUCLEAR Beirut MALAYSIA Teknik Mutu Sdn Bhd 2 Lorong 13/6A Section 13 Petaling Jaya Selangor Tel: 773455/5 (lines) MOZAMBIQUE A.N. Goncalves, Lda 162, 1st Apt. 14 Av. D. Luis Cana Postal 107 Louranco Marques Tel: 27091, 27114 Telex: 8-203 Negon Mo Cable: NEGON</p> | <p>NEW ZEALAND Hewlett-Packard (N.Z.) Ltd. 4-12 Cruickshank Street Kilbirnie, Wellington 3 Mailing Address: Hewlett-Packard (N.Z.) Ltd. P. O. Box 9443 Courtney Place Wellington Tel: 877-199 Telex: NZ 3839 Cable: HEWPAK Wellington Hewlett-Packard (N.Z.) Ltd. Pakuranga Professional Centre 267 Pakuranga Highway Box 51092 Pakuranga Tel: 569-651 Telex: NZ 3839 Cable: HEWPAK Auckland Analytical/Medical Only Medical Supplies N.Z. Ltd. Scientific Division 79 Carlton Gore Rd., Newmarket P. O. Box 1234 Auckland Tel: 75-289 Telex: 2958 MEDISUP Cable: OENTAL Auckland Analytical/Medical Only Medical Supplies N.Z. Ltd. P. M. B. 1994 147-161 Tory St Wellington Tel: 850-799 Telex: 3858 Cable: OENTAL, Wellington Analytical/Medical Only Medical Supplies N.Z. Ltd. P. O. Box 309 239 Stanmore Road Christchurch Tel: 892-019 Cable: OENTAL, Christchurch Analytical/Medical Only Medical Supplies N.Z. Ltd. 303 Great King Street P. O. Box 233 Dunedin Tel: 88-817 Cable: OENTAL, Dunedin NIGERIA The Electronics Instrumentations Ltd. N6B/770 Oyo Road Ouseun House P. M. B. 5402 Ibadan Tel: 61577 Telex: 31231 TEIL Nigeria Cable: THETEL Ibadan The Electronics Instrumenta- tions Ltd. 144 Agege Motor Road, Mushin P. O. Box 6645 Lagos Cable: THETEL Lagos PAKISTAN A. Company, Ltd. Osman Chambers Abdullah Haroon Road Karachi-3 Tel: 511027, 512927 Telex: KR894 Cable: COOPERATOR Karachi Mushko & Company, Ltd. 38B, Satellite Town Rawalpindi Tel: 41924 Cable: FEMUS Rawalpindi PHILIPPINES The Online Advanced Systems Corporation 6th Floor, Yuyuko Building 560 Quintin Paredes Street Binondo, Manila Tel: 40 05-41, 40-05-31 Telex: 3327 GENBANK RHODESIA Field Technical Sales 45 Kelvin Road North P. O. Box 3458 Salisbury Tel: 705231 (5 lines) Telex: RH 4122 SINGAPORE Hewlett-Packard Singapore (Pte.) Ltd. Blk. 2, 6th Floor, Jalan Bukit Merah Redhill Industrial Estate Alexandra P. O. Box 58 Singapore 3 Tel: 633022 Telex: HPSG RS 21486 Cable: HEWPAK, Singapore SOUTH AFRICA Hewlett-Packard South Africa (Pty.) Ltd. P. O. Box 120 Howard Place, Cape Province. 7450 Pine Park Center, Forest Drive, Pinelands, Cape Province, 7405 Tel: 53-7955 thu 9 Telex: 57-0006 Hewlett-Packard South Africa (Pty.) Ltd. P. O. Box 37099 Overport, Durban 4067 P41 Ridge Road, Durban Durban, 4001 Tel: 88-7478, 88-1080, 88-2520 Telex: 6-7954 Cable: HEWPAK</p> | <p>TAIWAN Hewlett-Packard Far East Ltd. Tawian Branch 39 Chung Shiao West Road Sec. 1, 7th Floor Taipei Tel: 389160, 1, 2, 3 Telex: 21624 HEWPAK Cable: HEWPAK TAIPEI Hewlett-Packard Taiwan 38, Po-Ai Lane, San Min Chu. Koshaling Tel: (07) 242318 Analytical Only San Kwang Instruments Co., Ltd., No. 20, yung Sui Road Taipei, 100 Tel: 3713171-4 Telex: 22894 SANKWANG Cable: SANKWANG TAIPEI TANZANIA Medical Only International Aeradio (E.A.), Ltd. P. O. Box 861 Dar-es-salaam Tel: 21251 Ext. 265 Telex: 41030 THAILAND UNIMESA Co., Ltd. Elcom Research Building Bangkok Sukumvit Ave Bangkok Tel: 932387, 930338 Cable: UNIMESA Bangkok UGANDA Medical Only International Aeradio(E.A.), Ltd., P. O. Box 2577 Kampala Tel: 54388 Cable: INTAERIO Kampala ZAMBIA R.J. Tilbury (Zambia) Ltd P. O. Box 2792 Lusaka Tel: 73793 Cable: ARJAYTEE, Lusaka</p> |
|---|---|---|---|--|--|

CERTIFICATION

Products, materials, parts, and services furnished on this order have been provided in accordance with all applicable Hewlett-Packard specifications. Actual inspection and test data pertaining to this order is on file and available for examination.

Hewlett-Packard's calibration measurements are traceable to the National Bureau of Standards to the extent allowed by the Bureau's calibration facilities.

The Hewlett-Packard Quality Program satisfies the requirements of MIL-Q-9858, MIL-I-45208, and MIL-C-45662.

